

## RootBarrier™ Root protection (420 UV) Installation guide

### Step 1: Preparation

Dig a trench as deep as the width of the roll.

### Step 2: Roll out

Unroll RootBarrier™ root barrier. Avoid damaging or creasing the material. If several rolls are to be used side by side, see 'Step 4: Connect'.

### Step 3: Install

Place the smooth side (the coated side) vertically towards the roots. If used for bamboo, place the top of RootBarrier® 420 UV 5 cm above the ground level.



### Step 4: Connect

#### a. Connect with RootBarrier™ Click Connection

- Place the ends of RootBarrier™ as far as possible against the inside of the clamp.
- Close the clamp by pressing firmly on the pressure points.
- If necessary, the clamp can be opened again with a screwdriver.

#### b. Connect with RootBarrier™ Butyltape

- Ensure that the RootBarrier™ is clean and dry.
- Bend both ends of RootBarrier™.
- Connect the material at three points, as shown in the illustration below.
- Firmly press the ends together.

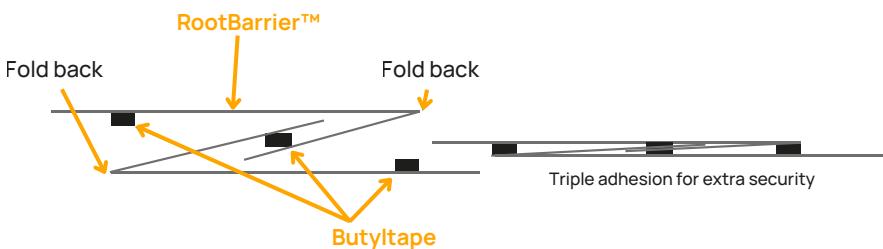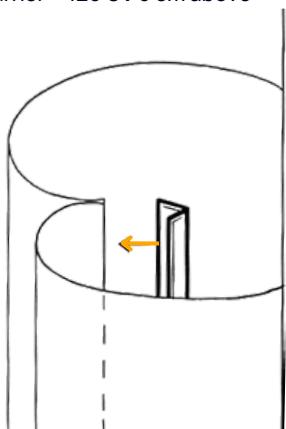

### Step 5: Cover

Fill in the trench and compact the soil by pressure or vibration.

RootBarrier™ root protection is extremely strong, lightweight and versatile, **and lasts for 25 years** when used covered. RootBarrier™ 420 UV has a **UV resistance of 5 years**. Our guarantee\* is not valid if the material is damaged or creased.

\*For more information, see our guarantee conditions.

