

RootBarrier™ Tree Watering Reservoir Installation guide

Step 1: Preparation

Determine the correct diameter of the edging, based on the size of the root ball.

Step 2: Cutting the edging to size

Unroll the material and cut the edging to the desired length.

Step 3: Positioning around the tree


Place the watering ring around the root ball so that it fits snugly. Ensure that the watering ring is partially (approx. 5-10 cm) buried in the ground for sufficient stability and leave it protruding approximately 25-30 cm above ground level.

Step 4: Connect and secure

Connect the ends using the RootBarrier™ connector by sliding both ends into the connector. Fill in the soil around the watering ring and press it down firmly. Ensure the watering ring sits flush with the ground level so that water remains within the ring.

Step 6: Use and maintenance

Water within the edging so that the water reaches the root ball directly. Check regularly that the edging is still firmly in place.

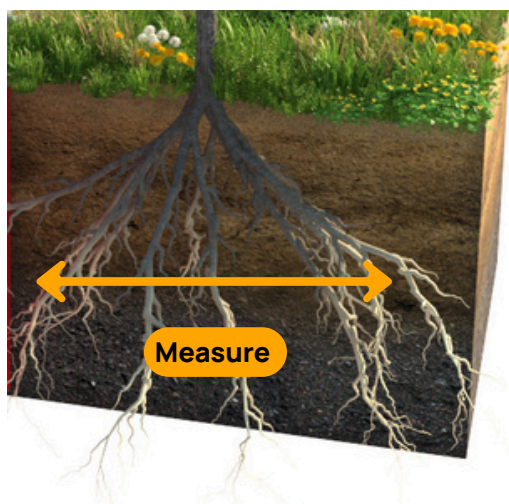

RootBarrier™ connector