

RootBarrier™ RollRib® Installation guide

Step 1: Roll out

Unroll RootBarrier™ RollRib®. If several rolls are to be used side by side, see 'Step 3: Connect'.

Step 2: Cutting


If necessary, you can easily cut the material along the cutting lines to the desired dimensions.

Step 3: Connect

- Ensure that the ribs overlap so that they fit together.
- Secure the overlap with the provided screws.

Step 4: Install

Install with the rib side facing the roots.

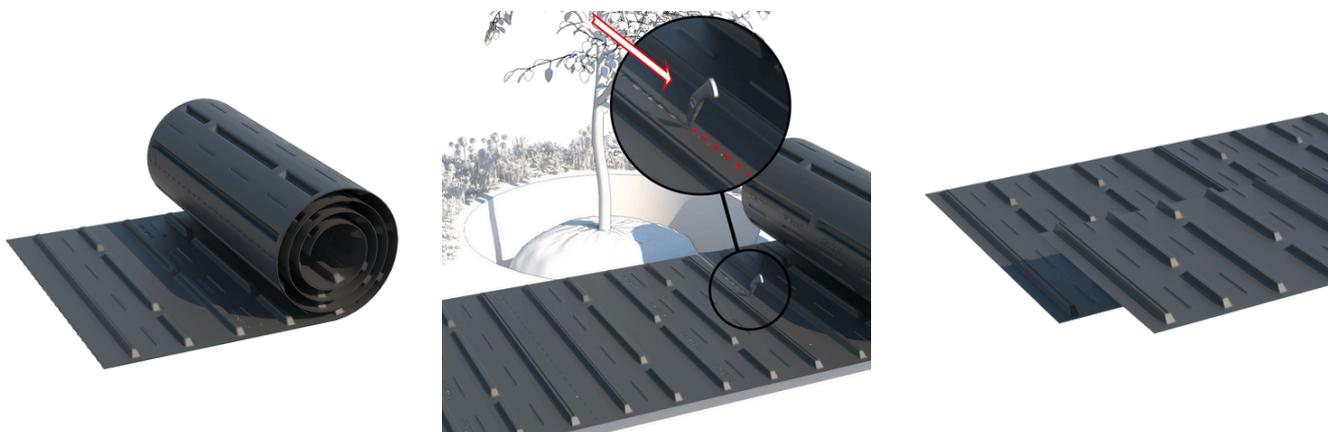

3b



4

